

Models:
M750CE
M750CE-2
M750CE-3

Favor de leer este manual en su
totalidad antes de operar su teléfono.

	Indicates that the handset ringer is switched off.
	Steady when an alarm is set. Flashes when the alarm is sounding.
	Indicates that the keypad is locked.
	Indicates when you have a new Voice Mail message. (This is a caller display service from the network operator.)
	Indicates when the battery is fully charged. Whole icon flashes when the battery is charging. Internal block icon flashes when the battery is in final charging stage.
	Indicates when the battery needs charging. Flashes when low battery power level is detected.
	Indicates when there are more characters or numbers in front of those being displayed.
	Indicates when there are more characters or numbers after those being displayed.
	Left soft key function. Press to access the main menu.
	Left soft key function. Press to confirm the current selection.
	Indicates new call in call list.
	Indicates more options available in lists, above or below.
	Right soft key function. Press to start an intercom call.
	Right soft key function. Press to go back to the previous menu (back) level or cancel the current action.
	Right soft key function. Press the alarm or mute/unmute the microphone during a call.

7

10. Base and Handset

Adding a new registry to the phonebook

Press <OK> to access the phonebook.
Press and to select PHONEBOOK
Press to select ADD.
Press <OK> to input the name.
Press <OK> to input the number.
Press <OK> and to scroll and select the ringer type desired.
Press <OK> to store the information in phonebook.

Verifying a phonebook registry

Press <OK> to access the phonebook.
Press to select the desired registry.
Press and to select LOOK.
Press <OK> and to scroll and verify the name, number and ringer stored in the phonebook.

Verifying a phonebook registry

Press <OK> to access the phonebook.
Press to select the desired registry.
Press and to select EDIT.
Press <OK>. The selected phonebook entry will be displayed.
Edit the name if necessary and press <OK>.
Edit the number if necessary and press <OK>.
Select the ringer and press <OK> to confirm.

Deleting a phonebook registry

Press <OK> to access the phonebook.
Press to select the desired registry.
Press and to select DELETE.
Press <OK> to confirm.

13

1. Because we care of you

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product reducing the amount of paper (pages) and therefore save trees to be cut for making this paper.

2. Important safety instructions

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Position your telephone on a flat non-slippery surface.
- The telephone cable should be kept out of the way in order to prevent accidents.
- Prevent placing telephone base close to other electronic devices or sources of heat.
- Do not expose the phone to direct sunlight.
- Protect your phone from dust, humid conditions, liquids and corrosive vapors.
- Clean your phone by only using a clean damp cloth.
- Use only the telephone line and power adapter provided with your telephone.

Never:

- Never take apart or open your telephone.
- Never touch the internal parts or cables with a sharp metal objects.
- Never carry your phone hanging from line or adapter cables.
- Never use your telephone in high humidity environments such as bathroom, laundry, etc.

2

Base station (see Fig. 3 in page 4)

#	Meaning
9	Find Press to page your registered handset(s). Press and hold to start the registration process.

6. Installation

Connecting the base station (see Fig. 4 in page 4)

- Plug the power supply and line cord into the base station.
- Plug the power adapter into an electrical wall outlet and the telephone line cord into your telephone line socket.

WARNING:

Use only the provided adaptor, using other power supplies may cause a hazard or damage the phone.
Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket to unplug in case needed. Never try to lengthen the mains power cable.

NOTE:

The base unit needs power for normal operation, it is not just for charging the handset batteries.

Installing and charging the batteries (see Fig. 5 in page 4)

- Place the two batteries, included with your telephone, inside the battery compartment making sure the correct polarity is properly aligned.
- Place the battery compartment cover in place and slide upwards until it snaps in closed position.
- Place the handset in the base and charge for at least 15 hours before using your telephone for the first time.
→ The handset will make a short sound when it correctly placed in a telephone base or charging base.

8

Setting the dialing mode between PULSE/TONE

Press and to select CONFIG BASE.
Press <OK> and to select DIALING MODE.
Press <OK> and to select between PULSE or TONE.
Press <OK> to confirm.

Setting the flash time

Press and to select CONFIG BASE.
Press <OK> and to select FLASH TIME.
Press <OK> and to select flash time between short (100ms), medium (270ms), long (600ms).
Press <OK> to confirm.

Changing PIN code

The access password (PIN) is a secret 4 number code which serves as security to accessing the base and handset programming. The default PIN number is 0000.
Press and to select CONFIG BASE.
Press <OK> and to select CHANGE PIN.
Press <OK> and you will be asked to enter the PIN number.
Enter the current PIN number.
Press <OK> and enter the desired new PIN number.
Press <OK> and enter again the same PIN number for verification.
Press <OK> to confirm.

Removing a handset registration

Press and to select CONFIG BASE.
Press <OK> and to select DELETE HANDSET.
Press <OK> and you will be asked to enter the PIN number.
Enter the configured PIN number.
Press <OK> and the list of handsets will be displayed.
Press to select the handset from the list.
Press <OK> to confirm.

Paging the handsets

If you cannot find a handset or has been misplaced, you can make the handsets ring by pressing the PAGE key in the base. All the handsets will ring at once. You can turn off the ring by pressing on any of the handsets.

14

3. General information

Keep your registration and original dated sale receipt in a safe place. To get warranty service on your product, you must provide us with a copy warranty.

For more information, additional doubts or questions, please call us:

MÉXICO	0-800-021-0000
COLOMBIA	01-800-700-1504
VENEZUELA	0800-100-4289
CHILE	800-201-4442
ECUADOR	1-800-10-2020
PARAGUAY	009-800-542-0030
URUGUAY	0004-0178-7011
COSTA RICA	0800-016-1031
ARGENTINA	0800-666-8876

4. Package content

Package content	Quantity		
	M750CE	M750CE-2	M750CE-3
Handset	1	2	3
Main base	1	1	1
Charging base with power supply	-	1	2
Power supply	1	1	1
Telephone line cable	1	1	1
Battery	2	4	6
User guide	1/1	1/1	1/1

3

7. Telephone operation

Making a call

Predialling to make a call

- Enter the phone number and press or to connect to the line and dial the number.
→ When entering the number, if you make a mistake, press C/⊗ to delete digits.

Direct dialing

- Press or to connect to the line and then enter the phone number.

Calling from the phonebook

- Press , , OK to enter the phonebook, then press or to select a number.
- Press or to make the call to the selected number.

Calling from the call list

- Press to enter the call list and then press or to select a number from the call list.
- Press or to make the call to the selected number.

Calling from the redial list

- Press to enter the redial list and then press or to select a number from the redial list.
- Press or to make the call to the selected number.

Call timer

Your handset automatically times the duration of every call. The call timer is displayed as soon as you answer a call or 15 seconds after dialing and remains on the screen for 5 seconds after the end of the call. It is shown in hours, minutes and seconds format (HH:MM:SS).

Answering a call

If the handset is not in its charging base:

- Press or to answer a call when there is an incoming call.

9

Alarm set up

This telephone can be used as an alarm clock. When the alarm is activated, will be shown in the display. When the set time is reached the display will show ALARM ON flashing and handset will ring for 45 seconds. Press any keys of the handset to turn off the alarm. If the REPEAT ALARM function (snooze) is activated, the Handset will ring again in 7 minutes. To turn this off you must press and hold .

Activating the alarm

Press and to select CONFIG HANDSET.
Press <OK> and to select CONFIG ALARM.
Press <OK> and to select between ON / OFF.
Press <OK> to confirm.

Configuring the alarm time

Press and to select CONFIG HANDSET.
Press <OK> and to select ALARM.
Press <OK> and to select between ON / OFF.
Press <OK> to confirm.
Enter the hour/minutes desired.
Press <OK> to configure the REPEAT ALARM (snooze) function.
Press <OK> and to select ON / OFF.
Press <OK> to confirm.

Selecting ringer tone

Press and to select CONFIG HANDSET.
Press <OK> and to select RINGER CONFIG.
Press <OK> and to select between EXTERNAL RING.
Press <OK> and to select the desired ringer. (5 polyphonic / 5 standard)
Press <OK> to confirm.

Adjusting ringer volume

Press and to select CONFIG HANDSET.
Press <OK> and to select RINGER CONFIG.
Press <OK> and to select between RING VOLUME.
Press <OK> and to select the desired volume. A total of 6 options are available including VOLUME OFF.
If VOLUME OFF is selected the icon will be displayed.
Press <OK> to confirm.

15

5. Knowing your telephone

Fig. 1

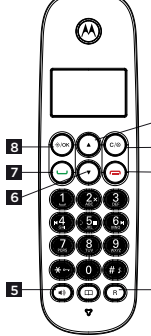 


Fig. 2

 


Fig. 3

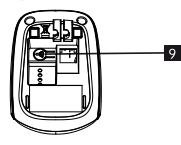 


Fig. 4

 
 


Fig. 5

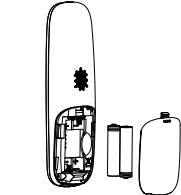

4

NOTE:

If AUTO ANSWER is activated, then lifting the handset off the base or charger will answer the call automatically and no keys need to be pressed.

Ending a call

- During a call, press to hang up and end the call, or
- Place the handset on the base cradle and the call will be ended.

Adjusting the volume

There are 5 levels, VOLUME 1 to VOLUME 5, to choose from for each of the earpiece and speaker volumes.

During a call:

- Press to select volume 1-5. The current setting is shown.
→ When you end the call, the setting will remain at the last selected level.

Turning off the handset ringer

In idle, press and hold # to turn off the handset ringer. The icon is displayed on the LCD.

NOTE:

The display will still flash the call icon and show CALL or the caller display number, when there is an incoming call, even if the ringer is turned off. To turn the ringer back on, press and hold # again.

Activating the keypad lock

You can lock the keypad so that it cannot be used accidentally while carrying it around.

- In idle, press and hold * to turn on the keypad lock and the icon will show up in the display.

NOTE:

You can still use to answer a call when the handset is ringing.

10

Key tone configuration

Press and to select CONFIG HANDSET.
Press <OK> and to select TONE CONFIG.
Press <OK> and to select KEY TONE.
Press <OK> and to turn ON and OFF this function.
Press <OK> to confirm.

Language configuration

Press and to select CONFIG HANDSET.
Press <OK> and to select LANGUAGE.
Press <OK> and to select the desired language.
Press <OK> to confirm.

Personalizing (naming) a handset

Press and to select CONFIG HANDSET.
Press <OK> and to select RENAME HANDSET.
Press <OK> and input the desire name/word.
Press <OK> to confirm.

Auto answering configuration

With auto answering active, an incoming call will be answered once the handset is taken out of the charging base without pressing any buttons.
Press and to select CONFIG HANDSET.
Press <OK> and to select AUTO ANSWER.
Press <OK> and to ON / Off this function.
Press <OK> to confirm.

Date format

Press and to select CONFIG HANDSET.
Press <OK> and to select DATE AND TIME.
Press <OK> and to select FORMAT DATE.
Press <OK> and to select the desired format (DD-MM-YY or MM-DD-YY).
Press <OK> to confirm.

Time format

Press and to select CONFIG HANDSET.
Press <OK> and to select DATE AND TIME.
Press <OK> and to select FORMAT TIME.
Press to select the format from 12HRS or 24HRS.
Press <OK> and to confirm.

16

The handset (see Fig. 1 in page 4)

#	Meaning
1	 Up arrow <ul style="list-style-type: none">• In stand by: press to enter the call log• In menu mode: press to scroll up the menu items• In phonebook list / redial list / call list: press to scroll up the list• During a call: press to increase the earpiece volume• During ringing: press to increase the ringer volume
2	 Right arrow button (erase / back / mute / intercom) <ul style="list-style-type: none">• In main menu mode: press to go back to idle screen• In sub-menu mode: press to go back to previous level• In sub-menu mode: press and hold to go back to idle screen• In editing / predialling mode: press to clear a character/ digit• In editing / predialling mode: press and hold to delete all characters / digits• During a call: press to mute / unmute the microphone• In idle mode: press to intercom another handset
3	 Turning off / End a call <ul style="list-style-type: none">• During a call: press to end a call and go back to idle screen• In menu / editing mode: press to go back to previous menu• In idle mode: press and hold to power off handset• In idle mode with handset off: press and hold to power on the handset
4	 Flash key <ul style="list-style-type: none">• In idle / predialling mode: press to insert a flash• During a call: press to generate flash signal

5

Redialling the last number

You can redial any of the 5 last numbers called. If you have stored a name in phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

Redialling a number from the redial list

- In idle mode, press to access the redial list.

NOTE:

If the redial list entry shows a name, press # to view the number of this entry.

- Press to browse the redial list.
- Press or to dial to the selected redial number.

NOTE:

If there are no numbers in the redial list, the display shows EMPTY .

Finding a handset

You can locate the handset by pressing the find key . All the handsets registered to the base will produce the paging tone and show PAGING on the display for 60 seconds.

You can stop the paging by pressing on any handset or on the base again.

NOTE:

If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

8. Private phonebook

Each handset can store up to 20 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. (Note that the different ringtones only play when you receive a call if you subscribe to caller display and the incoming number matches the stored number.) Phonebook entries are stored alphabetically by name.

11

Setting up the time

Press and to select CONFIG HANDSET.
Press <OK> and to select DATE AND TIME.
Press <OK> and to select CONFIG TIME.
Press <OK> to input information of the time.
Press <OK> to confirm.

Setting up the date

Press and to select CONFIG HANDSET.
Press <OK> and to select DATE AND TIME.
Press <OK> and to select CONFIG DATE.
Press <OK> to input information of the date.
Press <OK> to confirm.

Returning to default settings

Doing this will reset your system to factory settings and all data will be lost.

Press and to select DEFAULT.
Press <OK> and you will be asked to enter the PIN number.
Key in your PIN number (4 digits).
Press <OK> to accept.
Press <OK> to confirm.

Registering handset to the base:

- Press and hold on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press and to select REGISTRATION
- Press OK to display PIN?.....
- Enter the 4-digit system PIN (default 0000).
- Press OK to confirm, and the display will show SEARCHING. If the handset registration is successful, you will hear a confirmation tone and the will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the will still flash.

17

5		Speakerphone key <ul style="list-style-type: none">• During a call: to turn on or off the speakerphone.• In call list/phonebook list: press to make to make a call through the speakerphone.• During ringing: Press to answer a call
6		Down key (redial / down) <ul style="list-style-type: none">• In idle mode: press to

Listening to new stored messages

Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **PLAY MESSAGE**.
Press **<OK>** to start playing the messages. The handset will display the date and time information of when the message was recorded.

Note
The icon **★** will show up in the handset display when a new message is being played.

Press **⏮** to select **STOP, FORWARD, REWIND, OFF** to perform these functions.

STOP: Stops the message when being played and returns to the answering machine menu.
FORWARD: Plays the next message. The date and time will be shown in the handset display.

REWIND: Returns to the beginning of the message. The date and time will be shown in the handset display.

OFF: Ends the current playing message and the next available message will start playing.

Note
As an alternate method, you can follow the functions belows when playing and managing your messages.
Press the key **<5>** to stop playing message.
Press the key **<4>** to play the message from the begining.
Press the key **<4>** twice to return to the previous message.
Press the key **<6>** to play the next available message.
Press the key **<2>** to end the current playing message.
Press **<OK>** to confirm.

Recoding a Memo

You can record a memo in your answering machine so other persons that use the phone can listen to it. The memo is accessed the same way as listening to stored message. You can record a memo any time no matter if the answering machine is in off or on mode.

Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **MEMO**.
Press **<OK>** to start recording memo. The display will show **RECORDING**.
Press **<OK>** to stop the recording.
The memo recorded will then play and will be saved in memory.
Press **<C>** to stop the playback without saving the memo and returns to the menu.

Configuring the answering machine

You will need to use your handset to configure your answering machine using the menu **ANS MACHINE**.

Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **ANS SETTINGS**.
Press **<OK>** and **↶** to select **ANS MODE**.
Press **<OK>** and **↶** to select **ANS/REC** or **ANS ONLY**.
Press **<OK>** to confirm.

Recording your own outgoing message (OGM)

You can record your own outgoing message for **ANS/REC** or **ANS ONLY** modes. After you record you message, it will be used when the answering machine answers a call coming in. If you deactivate your personal OGM, then the answering machine will use the factory set recording of your system which is in English.

Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **ANS SETTING**.
Press **<OK>** and **↶** to select **OUTGOING MSG**.
Press **<OK>** and **↶** to select **ANS & RECORD** or **ANS ONLY**.
Press **<OK>** and **↶** to select **PLAY MESSAGE**.
Press **<OK>** to start recording your personal outgoing message. The screen will show **RECORDING**.
Press **<OK>** to save. Your personal message will be replayed automatically after you finish your recording.
Also, you can press ***** to return to the previous screen without saving the personal message.

Setting the amount of ringers for answering machine to answer
You can set the amount of ringers of when you want your answering machine answers an incoming call.

Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **ANS SETTING**.
Press **<OK>** and **↶** to select **ANSWER DELAY**, available options:
2 rings, 4 rings, 6 rings, 8 rings or none.
Press **<OK>** and **↶** to select the number of rings wanted.
Press **<OK>** to confirm.

Setting maximum recording time per message

Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **ANS SETTING**.
Press **<OK>** and **↶** to select **RECORD TIME**, options available:
60S, 120S, 180S, or unlimited.
Press **<OK>** and **↶** to select the recording maximum time wanted.
Press **<OK>** to confirm.

Monitoring the message that is being recorded

When the answering machine is activated and someone is leaving a message, the base automatically enters into monitoring call mode (you will hear the message that is being recorded). You can also monitor the call that is being recorded, without picking up call and through the handset.

Activating/Deactivating your answering machine

You can activate or deactivate your answering machine using your handset so calls can be picked up and messages can be stored in your machine.
Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **TAM SETTING**.
Press **<OK>** and **↶** to select **ANS □ REC**.
Press **<OK>** and **↵** to select **TAM ON/OFF**.
Press **<OK>** to confirm.

Monitoring a message through your handset

When a message is being left in the answering machine, on the screen of the handset it's going to show the word **MONITOR**. Press **⓪OK>** to listen to the message that is being recorded, without picking up the call. At any time, you may answer the call by pressing any key on the handset and the recording will be interrupted automatically.

Changing the recording compression ratio

Increasing the compression ratio will permit you save more messages in your system, but they will have a lower audio quality.
You can select up to three compression ratios for messages that will be attended by the answering machine (high, medium, low).
Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **TAM SETTING**.
Press **<OK>** and **↶** to select **COMPRESSION**.
Press **<OK>** and **↶** to select between high, medium and low.
Press **<OK>** to confirm selection.

Activating the remote access

When you are out, you can remotely access your answering machine to listen and manage your messages. To be able to have remote access, you must first make sure you know your security PIN for your answering system. It is recommended for you to assign your own personal PIN to prevent access from unauthorized persons.

Changing your answering machine security PIN

Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **TAM SETTING**.
Press **<OK>** and **↶** to select **MODIFY PIN**.
Press **<OK>** to enter actual PIN. (default PIN is 0000)
Press **<OK>** to enter new PIN.
Press **<OK>** to enter again the new PIN.

Activating or disactivating remote access

Press **⏮** and **↶** to select **ANS MACHINE**.
Press **<OK>** and **↶** to select **TAM SETTING**.
Press **<OK>** and **↶** to select **REMOTE ACC**.
Press **<OK>** and **↶** to select **ON/OFF** to permit the remote access.
Press **<OK>** to confirm.

Accessing remotely your answering machine

When your answering machine answers the remote call, press **< * >** if you want to access the remote mode of your answering machine.

Note 1

Follow the proper process to operate this answering machine model. Enter your security PIN of your answering system.

Note 2

If you enter the PIN incorrectly three times in a row, the call will be hung up automatically.

Press the following keys to operate your answering machine:

Key	Functions	
	When message is not being played.	When message is being played.
2	--	Turns off the message being reproduced.
4	--	Restarts from beginning the message being reproduced. Press twice to return to the previous message.
5	Reproduces messages.	To reproduce the current message.
6	--	Moves to the next message.
7	Turns on the answering machine.	--
8	--	Reproduces current message.
9	Turns off the answering machine.	--
*	To enter the 4 digits	--

12. Technical details

Technology	DECT
Caller identification	Dual: DTMF and FSK
Temperature range	Operation 0 °C to 40 °C Storage -20 °C to 60 °C

13. Warranty for consumer products

Thank you for purchasing this Motorola branded product manufactured under license by MDX ELECTRONICS LLC.
What does this warranty cover?
Subject to the exclusions contained below, MDX ELECTRONICS LLC warrants that this Motorola branded product or certified accessory sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This warranty is your exclusive warranty and is not transferable.
Who is covered?
This warranty extends only to the first consumer purchaser, and is not transferable.
What will MDX ELECTRONICS, LLC do?
MDX ELECTRONICS LLC or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any products or accessories that does not conform to this warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new products, accessories or parts.
What other limitations are there?
ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR MDX ELECTRONICS LLC, BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products covered	Length of coverage
Consumer products	One (1) year since the day of the original purchase by the original first consumer.

Exclusions
Normal wear and tare
Periodic maintenance, repair and replacement of parts due to normal wear and tare are excluded from coverage.
Batteries
Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this warranty.
Abuse and misuse
Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the products or accessories for commercial purposes or subjecting the product or accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or MDX ELECTRONICS LLC., are excluded from coverage.
Use of non-Motorola branded products and accessories
Defects or damage that result from the use of non-Motorola branded or certified products or accessories or other peripheral equipment are excluded from coverage.
Unauthorized service or modification
Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, MDX Electronics or its authorized service centers, are excluded from coverage.
Altered products
Products or accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.
You will receive instructions on how to ship the products or accessories at your expense and risk, to a MDX Electronics, LLC authorized repair center when applicable. To obtain service, you must include: (a) the product or accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the product.

14. Warranty for Mexico

ElectronicsMDX, S. de R.L. de C.V. warrants this product for a period of one year against any defect of manufacture and operation from the date of delivery to the final consumer.

BRAND: _____
MODEL: _____
S/N: _____
DATE OF PURCHASE: _____

COMMERCIAL STAMP

To make this warranty, the customer must present this policy, duly stamped by the establishment that sold it, along with the product in the store where it was purchased, or in our service center, located in:

Newton 293 piso 3 despacho 301
Col. Chapultepec Morales
Del. Miguel Hidalgo CP 11570, México D.F.
Tel. 01 800 801 6398

Terms

During the term of this warranty policy, ElectronicsMDX, S. de R.L. de C.V. through your authorized dealer, undertakes to repair or change the product, as well as parts, such as faulty components, or defective due to workmanship, without any charge to the consumer. Transportation costs arising from the enforcement of this policy, will be covered by ElectronicsMDX, S. de R.L. de C.V. Time to repair in any case will not be greater than 30 days from the date that product is received at our service centers, in which you can also get replacement parts, parts, components, consumables and accessories.

Time to repair in any case will not be greater than 30 days from the date that product is received at our service centers, in which you can also get replacement parts, parts, components, consumables and accessories.

THIS WARRANTY IS NOT VALID IN ANY OF THE FOLLOWING CASES:

- a) When the product has been used under conditions other than normal.
b) When the product has not been operated according to the instructions for use provided with product.
c) When the product has been altered, or repaired by persons not authorized by the importer.

EXCLUSIONS

We are not responsible for the warranty of systems or equipments in which the equipment can be part of. Any loss or alteration of information and data packages are not covered.o

Importer information:

ElectronicsMDX S. de R.L., S.A. de C.V.
Av. Paseo de las Palmas # 555, piso 8
Col. Lomas de Chapultepec, Delegacion Miguel Hidalgo
Mexico, D.F. CP11000
TEL. 01 800 830 8177 o 55 5693 6217

This warranty is only valid in Mexico.